



# TDK616 TABLET DASH KIT

2011 - 2017 JEEP WRANGLER

Installation Instructions

7545 Rosecrans Ave. | Paramount, CA 90723 | Toll: 866-303-4714 | Fax: 562-724-9668  
 Email: info@carrichs.com | www.carrichs.com

Components					Tools Required	
1.	2.	3.	4.	5.	1.	2.
TDK	Bar Magnets	Coin Magnets	Templates	Adhesive Promoter	7 mm Hex Socket Driver	Plastic Pry Tool



## PART I: REMOVE OEM DASH PANEL

1. Remove tray on top of vehicle's dash panel to locate and remove hex bolt using 7mm socket

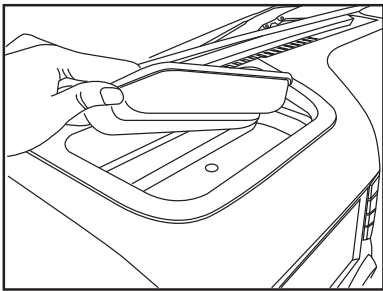


fig. 1.1

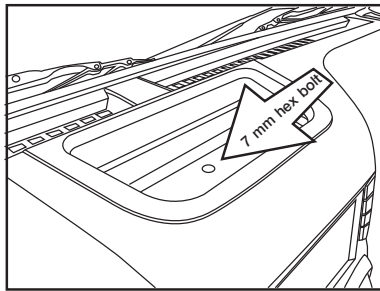


fig. 1.2

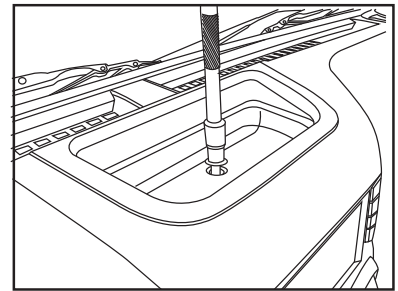


fig. 1.3

2. Using a plastic pry tool to remove power window switch. Pull power window switch out and slide red lock tab to unlock connector.

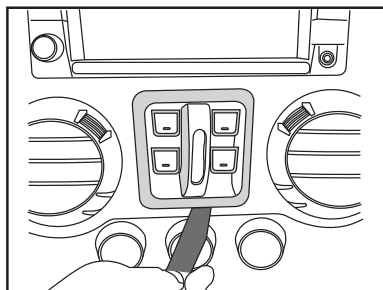


fig. 2.1

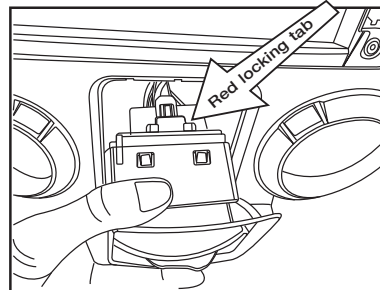


fig. 2.2 red lock tab to unlock connector  
Pull power window switch out and slide

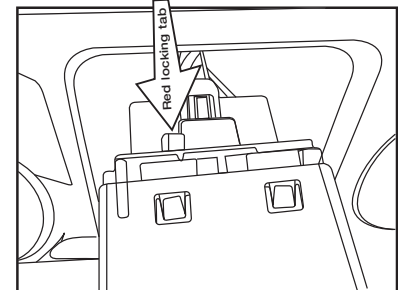


fig. 2.3 red lock tab to unlock connector  
Pull power window switch out and slide

3. Press down on connector locking tab to remove power window switch from wiring harness. With power window switch removed, locate and remove hex bolt with 7mm socket

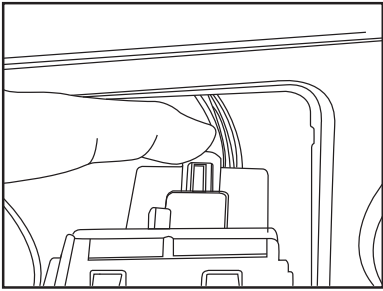


fig. 3.1

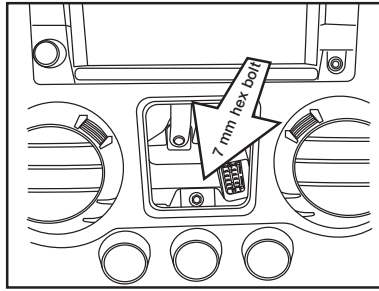


fig. 3.2

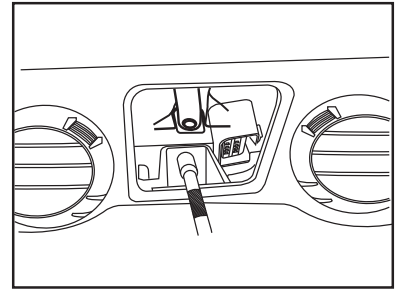


fig. 3.3

4. Using a pry tool and remove plastic panel under steering wheel column.

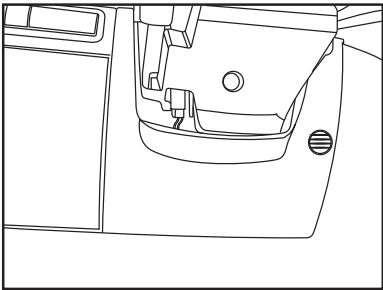


fig. 4.1

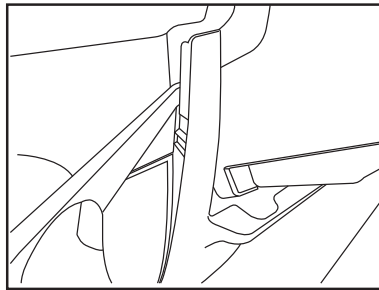


fig. 4.2

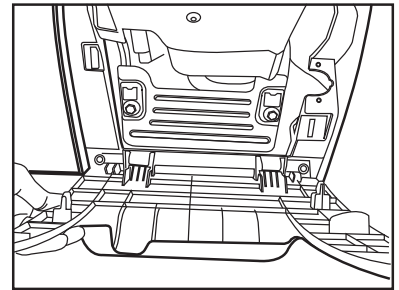


fig. 4.3

5. Locate 2 hex bolts (fig 5.1) and remove using 7mm hex socket driver (fig 5.2-5.3)

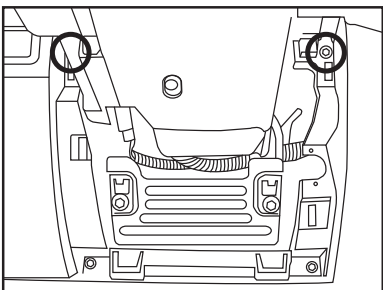


fig. 5.1

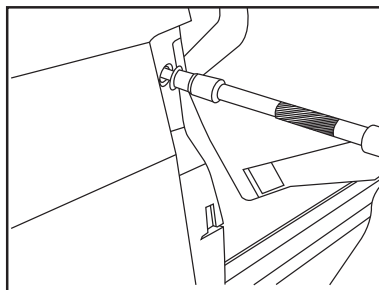


fig. 5.2

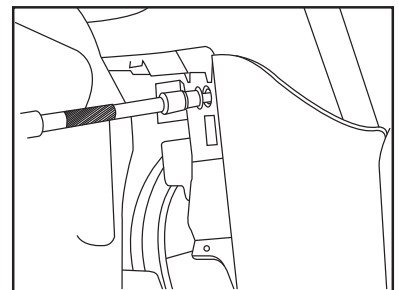


fig. 5.3

6. Lower the tilt steering column all the way down. Grab the top back of the dash panel and pull toward you. Panel will pop free.

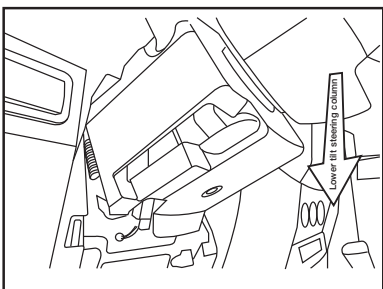


fig. 6.1

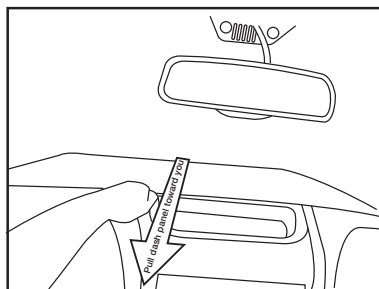


fig. 6.2

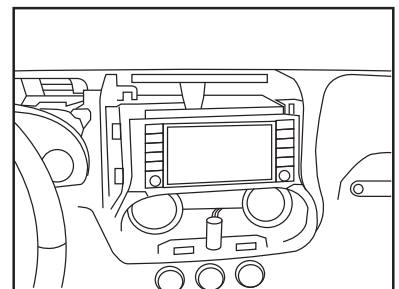


fig. 6.3

## PART II: INSTALL MAGNETS

7. With OEM dash panel removed, align the TDK over OEM panel and secure with masking tape. With TDK secured, flip over OEM dash panel to its back side

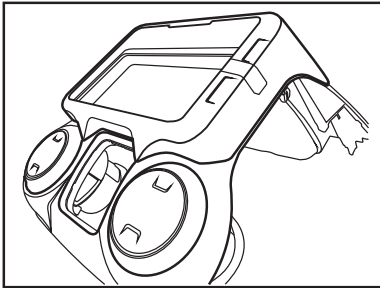


fig. 7.1

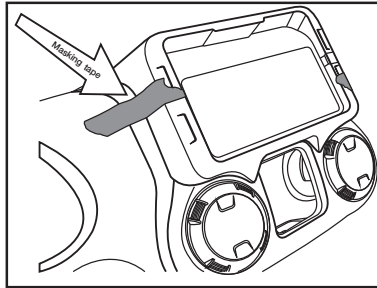


fig. 7.2

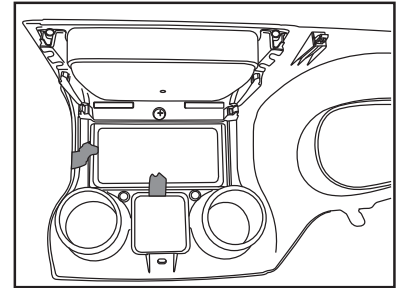


fig. 7.3

8. Clean surface area with supplied 3M adhesive promoter and allow surface to be air dried. Align template to corner edges to backside of OEM panel (fig. 8.2) Peel off red 3M tape backing and firmly hold on to magnet and adhere to designated spots as shown in figure 8.3



**WARNING!**

Magnetic forces are extremely strong! Do not allow magnets to attract to each others as this could result in broken components, personal injury or even death!

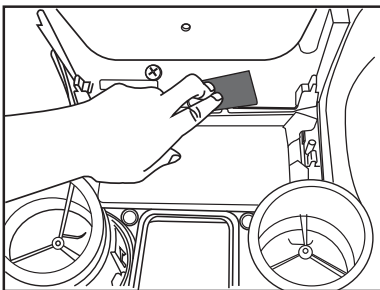


fig. 8.1

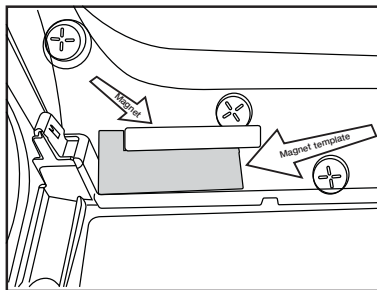


fig. 8.2

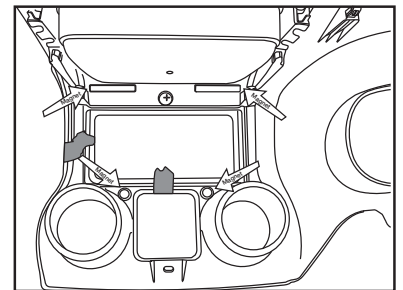


fig. 8.3

9. Remove masking tape and test to see if TDK attracts to OEM dash properly When satisfied, re-install OEM dash panel by reverse steps in part I.

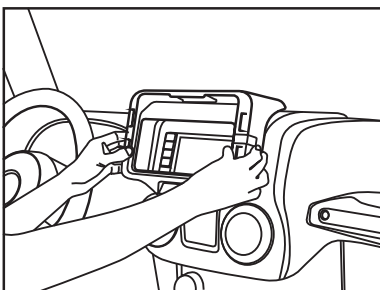


fig. 9.1

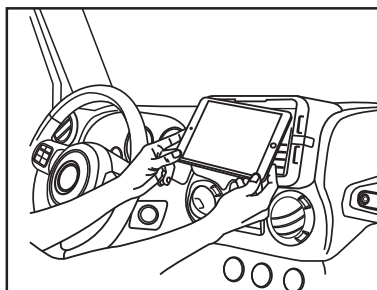


fig. 9.2

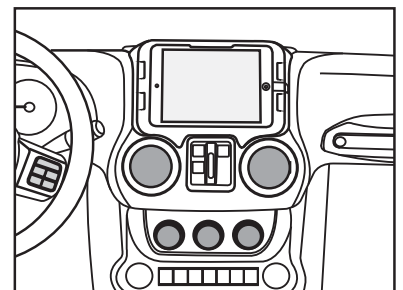


fig. 9.3



**WARNING!**

iPad Mini & tablet dash kit may dismount under shock. Driver assumes all risks.